

How to remove a PC case from the Identity Kiosk

KIOSK
Master

The inside lower half of the Identity Kiosk is designed to contain the PC. To access this compartment, open the desk and remove the lower poster plate, as described in the Identity Kiosk Installation Manual and the User Manual. Then take the following steps to remove the PC:

1. Release the lower PC bracket from the kiosk frame, by removing the bolt shown in Figure 2, on both ends of the bracket. Block the PC while removing the bolts, to prevent the PC from folding outwards. Once the second bolt has been removed, gently release the PC. While doing so, if necessary guide the cable bundle below the PC past the power panel at the bottom of the kiosk.

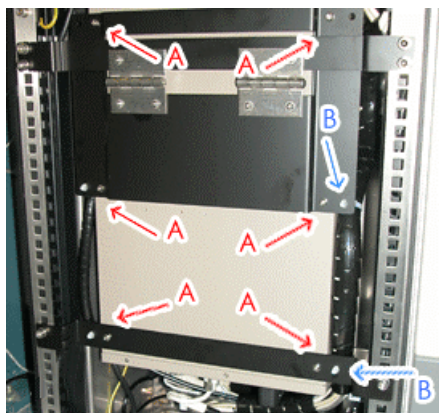


Figure 1: Overview with PC bracket screws (red arrows) and panel wraps (blue arrows).



Figure 2: Lower PC bracket attached to the kiosk frame.

How to remove a PC case from the Identity Kiosk

KIOSK
Master

2. Disconnect the equipment cables from the lower side of the PC, as shown in Figure 3. If necessary, label the cables, to simplify reconnecting the equipment at a later stage, or make a note of which cable connects where on the PC.



Figure 3: Equipment connections below the PC.

3. Remove the cable bundle on the right hand side from both PC brackets, by cutting the panel fixing tie wraps, as shown in Figure 4. The panel fixing tie wraps are located on the positions indicated by the blue arrows marked B in Figure 1.

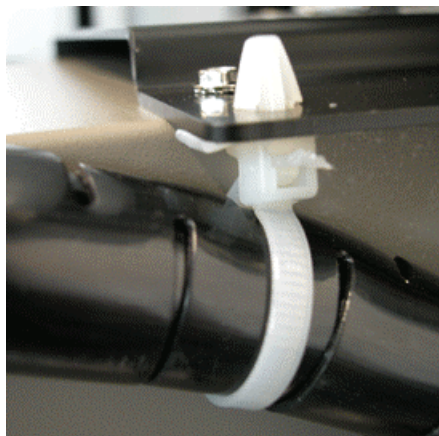


Figure 4: Cable bundle attached to a PC bracket.

How to remove a PC case from the Identity Kiosk

KIOSK
Master

4. To release the upper PC bracket:
 - Remove the upper bolts (one on each side) from the kiosk frame, as shown in Figure 5.
 - Loosen the lower bolts enough to be able to remove the bracket.



Figure 5: Upper PC bracket.

5. Lift the PC off the remaining bolts and remove it from the kiosk body.
6. Finally remove the bolts from the kiosk frame and, if necessary remove the PC brackets from the PC case by removing the screws indicated by the red arrows marked A in Figure 1. Store the screws and bolts for future use.

This concludes the removal of the PC case from the Identity Kiosk.