

How to install a PC case in the Identity Kiosk



The inside lower half of the Identity Kiosk is designed to contain the PC. To access this compartment, open the desk and remove the lower poster plate, as described in the Identity Kiosk Installation Manual and the User Manual.

Then take the following steps to install the PC:

1. Attach the upper and lower brackets to the PC case. Use the small screws supplied with the brackets. The red arrows marked A in Figure 1 indicate their locations. Please note the asymmetrical position of the kiosk frame bolt holes in the lower PC bracket. Make sure they are positioned as shown in Figure 5.

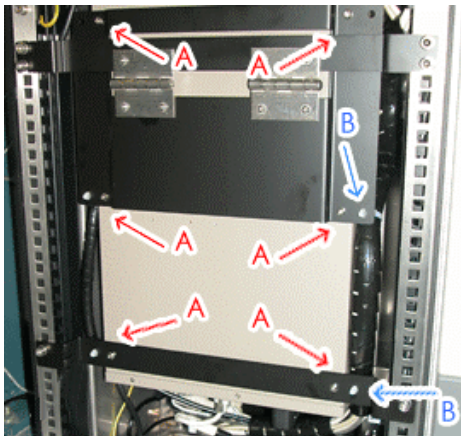


Figure 1: Overview with PC bracket screws (red arrows) and panel wraps (blue arrows).

How to install a PC case in the Identity Kiosk



2. Attach the upper PC bracket to the kiosk frame, as follows:
 - Insert the lower bolts for the upper PC bracket into the kiosk frame (one on both sides), as shown in Figure 2. Use the large (M6) bolts supplied with the brackets. Do not tighten the bolts, but insert them deep enough to hang up the PC.
 - Hang the PC up by the two lower bolts.
 - Please beware of sharp edges on the PC brackets.
 - Insert the upper bolts into the kiosk frame, as shown in Figure 2.
 - Tighten both the upper and lower bolts.



Figure 2: Kiosk frame with nuts (left picture) for the upper PC bracket (installed, right picture).

3. Connect the equipment to the lower side of the PC, as shown in Figure 3. Connections may vary, according to the equipment installed in the kiosk. If necessary, contact your kiosk supplier for connection details.



Figure 3: Equipment connections below the PC.

How to install a PC case in the Identity Kiosk



4. Attach the cable bundle on the right hand side to both PC brackets. Use the panel fixing tie wraps supplied with the PC brackets, as shown in Figure 4. Insert them in the holes in the PC brackets, as indicated by the blue arrows marked B in Figure 1.

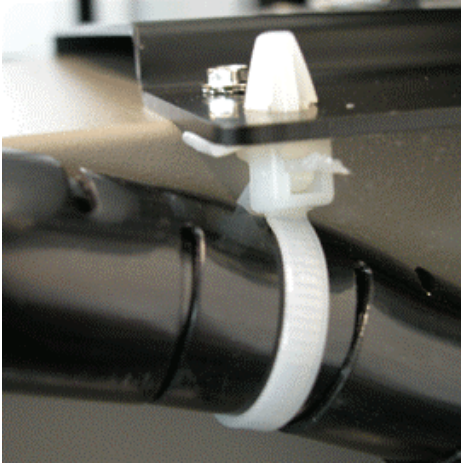


Figure 4: Attaching the cable bundle to the PC.

5. Finally, push the lower half of the PC into the kiosk and bolt the lower PC bracket to the kiosk frame (again on both sides), as shown in Figure 5. While pushing the PC in, guide the cable bundle below the PC over the power panel at the bottom of the kiosk.



Figure 5: Kiosk frame with nut (left picture) for the lower PC bracket (installed, right picture).

This concludes the installation of the PC case in the Identity Kiosk.

Before placing the poster plates back and closing the kiosk, as described in the Identity Kiosk Installation Manual and the User Manual, test all hardware

How to install a PC case in the Identity Kiosk



functionality to make sure all equipment is connected properly to the PC: check the touch screen, track ball, keyboard, make a test printout, etc.